




Video On-Demand

Quick Tips Guide

In order to use VOD, make sure the "STB" button is selected.

How to Purchase Video On-Demand

- Display the Menu
 - Select "Video On Demand"
 - Press "OK"
 - Select a category to view programming
 - Press "OK"
 - Select a program
 - Press "OK"
 - Choose "Rent" option
- Enter PIN—default PIN is 1234.

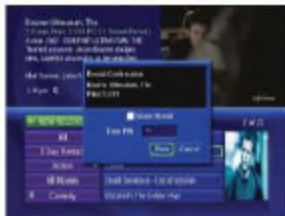

By checking the "Share Rental" box the program selected can be viewed on other TV's/set top boxes.

How to Change the PIN

- Display the Menu
- Select "Settings"
- Press "OK"
- Enter Password—default is your 7-digit telephone number
- Edit PIN on "Users" tab



Controlling Video On-Demand


- Pause
- Play
- 4 speeds of rewind
- 4 speeds of fast-forward
- Stop



Once you stop the Video On-Demand program, the television will automatically go back to regular programming. In order to resume watching your Video On-Demand purchase or to watch it again, you must go to the "Vault", See instructions below.

Replaying a Previous Purchase

- Display the Menu
- Select "Vault"
- Select category
- Select program to resume
- "OK" to resume

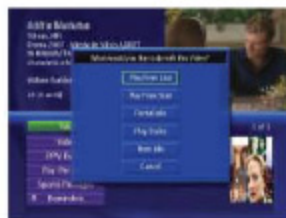

Display Rental Info

- Display the Menu
- Select "Vault"
- Select a category
- Select program to resume
- Choose "Rental Info"



Search for Programming

- Display the Menu
- Select "Search"
- Use the keypad to type the title you would like to watch, pressing "OK" after each letter
- Select "Search Rentals"
- Select a program
- Press "OK"



NOTE: If you are searching for a particular program, narrow the search by typing the complete name of the program.